


Line Cleaning Help

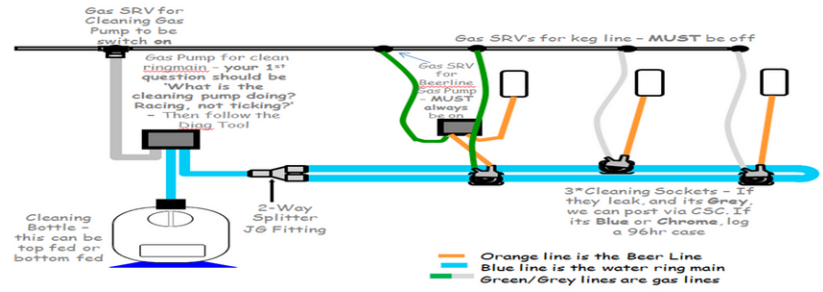

Not Ticking

Instruction 1 → Find the coloured pipe coming from the front left hand side of the pump (gas line)




Instruction 2 → Follow this coloured line to the SRV, turn the lever/switch in the opposite direction. Open the bleed valve on the cellar buoy and see if it starts ticking.



Instruction 3 → If there is still no ticking, check to make sure gas is coming into the system by;

- a. If the pipe is grey, white or green, remove a coupler (that is using the same gas) off the ringmain, turn the gas back onto that coupler, pointing the coupler towards the floor and away from you, checking for flow
- b. if the pipe is blue, check another gas pump is ticking and check your compressor
- c. if the pipe is black, check the nitrogen levels on the GasGen system

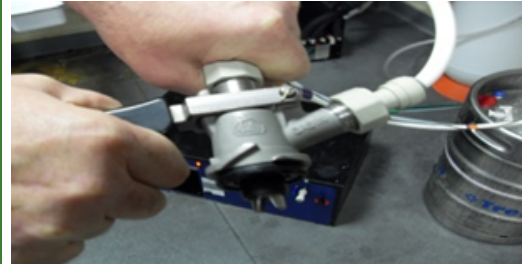

Instruction 4 → Gas may be getting into the system, make sure all of the couplers have the gas turned off to them while connected to the cleaning sockets. Remove them, point them away from you, towards the floor and depress the handle for a couple of seconds.

