


Line Cleaning Help

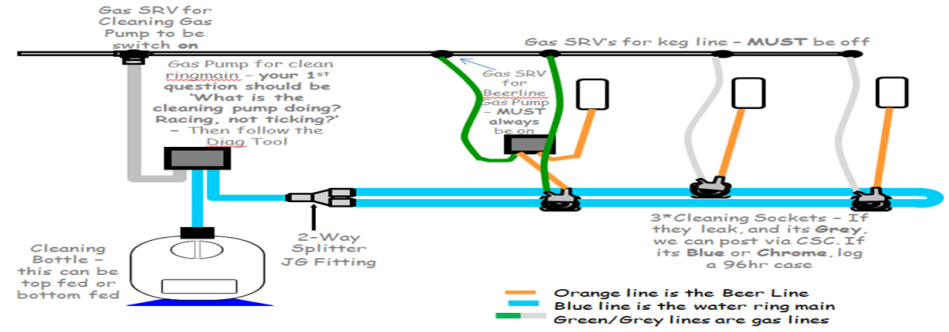

Line Cleaning - Slow Or Stopped but the Gas Pump is ticking as normal
SINGLE LINE

Instruction 1

Does the product have a gas pump fitted for this line?
Does it tick when the bleed valve on the cellarbuoy is opened?

If the Gas Pump isn't ticking, make sure the pump is switched on at the SRV.

- If the pipe is Grey, White or Green, remove a coupler (that is using the same gas) off the ringmain, turn the gas back onto that coupler, and point the coupler away from you, towards the floor and press handle for a couple of seconds. If there is no gas, please change the gas bottle
- If the pipe is blue, check another gas pump is ticking. If not, check compressor
- If the pipe is black, check the nitrogen levels on the GasGen system



Instruction 2

Locate the flow control under the bar/or variflow tap, open the handle, and turn slightly.

A bit of yeast may have just clogged up the hole in the flow control, causing it not to pull through

Instruction 3

Make sure the nozzle/sparkler isn't blocked