


# Line Cleaning Help

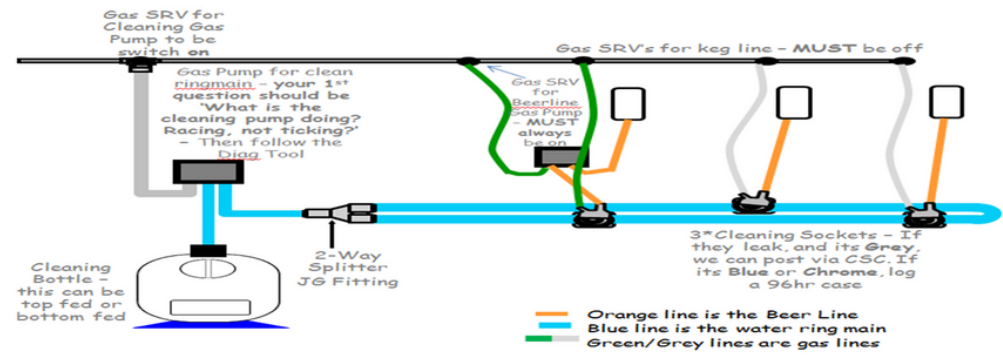


## Pump Racing

Does the pipe connect to the top, or the bottom of the current bottle?

If Top Fed;  
 a. Check all of the connections on the top of the bottle are tight, including making sure the dip tube isnt loose  
 b. If the connection is a sankey coupler on top of the bottle, check the couple washers  
 c. Check the line from the bottle to the pump to see if there are any kinks or compressions



If Bottom Fed;  
 a. Check the line from the bottle to the pump to see if there are any kinks or compressions

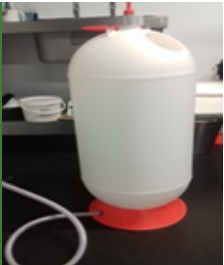

Instruction 2

Remove all of the couplers from the ring main, depress these 1 by 1, making sure there is no gas to any.  
 Reconnect 1 by 1, filling the cellarbuoys until full, and ensuring there is no sign of air.

Instruction 3

**ONLY PERFORM THIS OPTION IF THE BOTTLE IS TOP FED**  
 If the pump is still racing, please connect the line off the bottle and place the line directly into the bottle, below the liquid, thus eliminating any leaking connections, then repeat instruction 2

